


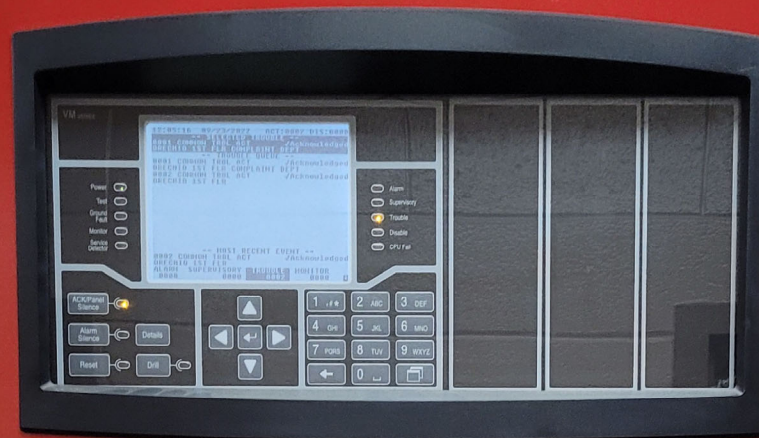

VM SERIES

In morning, before
work starts, switches
yellow zone to
armed to Bypass

In afternoon, when
work is complete,
switch yellow switches
Get manual switch to
Normal

Big problems?
Call to Electronics

To Reset

- 1.) Alarm Silence - new p
- 2.) Alarm Silence - old p
- 3.) Bypass VM-Alarm Zone
- 4.) Reset new panel (Please
new panel to clear before
- 5.) Reset old panel 2X
- 6.) Bring VM-Alarm Zone to

(This is for Alarms not Troub)